

Operating Manual
International Range
Electronic Chair Scales

ADE

M400660



M400660-210326-Rev005-UM-de



Contents

Contents	1
Introduction	2
Check carton contents	2
Assembly and set up	3
Alignment of the scale	3
Power supply	3
Replacing the rechargeable battery	4
Display	4
Front view and side view of the display	4
Display description	4
Key pad	5
Operation	6
Positioning of patient	6
Correct weighing	6
How to change the unit	6
Tare function	6
Weighing with preset tare values	7
HOLD function	7
BMI (Body Mass Index)	7
Evaluation of the Body Mass Index	7
Connecting additional devices	8
Print out a record	8
Error Messages	8
Cleaning and Maintenance	9
Cleaning	9
Storage and Transport	9
Warranty – Liability	9
Technical data	10
CE-marking and Declaration of Conformity	11
Declaration of CE Conformity	11

Introduction



This symbol means: "Consult operating instructions". To achieve accurate results, read the instructions for use carefully before use and follow all instructions provided therein. Keep the instructions for use for future reference.

Your ADE electronic chair-scale is a quality, sturdy and durable product manufactured in accordance with national regulations in Germany.

ADE instruction manuals have been prepared to provide the user with all the necessary knowledge about the safe use of ADE scales and their related accessory equipment.

For further questions about how to use the products or about this or other service manuals, feel free to contact your local ADE representative or visit our web page at www.ade-hamburg.de.

In order to achieve the best possible results kindly read and follow the operation manual in all respects.

Check carton contents

- Chair Scale - assembled
- Mains adapter
- Operating manual


Electronic Chair Scales	
Series: M4006600	
Configuration of the basic version	1 display device 1 seat anthracite 2 flexible arm- and footrests 2 standard fixed wheels 2 steering wheels with brake system
Reference number	Description of supplementary equipment to the standard version
M400660	Two fixed wheels; two steering wheels with brakes
M400660-01	Like M400660, but with four steering wheels



M400660



M400660-01

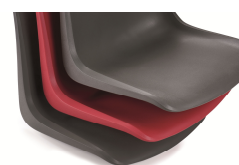

Seat colours: anthracite, light gray, red

Safety

The ADE-display unit corresponds to the latest state of the art technology and complies with standard regulations and directives. Kindly follow the safety instructions in this operating manual, the country-specific installation standards as well as the applicable safety conditions and accident prevention regulations in all aspects.

- Operate the scale only with the original ADE mains adapter.
- Always connect the mains adapter to the scale **BEFORE** connecting it to the electrical outlet.
- Disconnect from the electrical outlet **BEFORE** disconnecting the adapter from the scale.
- In case the mains adapter became wet or show visible damages the scale can no longer be operated by using this mains adapter. In this case please contact your local dealer or service partner.
- The voltage and power supply as mentioned on the type plate must match the mains voltage and power type at the place of use.
- When using the scale with a mains unit ensure that the supply cable is routed in such a way as to exclude any type of potential trip hazard.
- Remove the mains plug before cleaning the unit.
- Do not operate the unit in hazardous or unstable conditions.
- Set up the unit as far away as possible from equipment that generates electromagnetic or other interference. Portable and mobile HF-communication systems may influence electronic medical devices.
- All actions and operations described in this operation manual may only be carried out by professional personnel authorized by ADE or official appointed dealers.

Assembly and set up

The ADE chair scale is already been delivered in a fully assembled condition. Please insure that your scale is being placed free of any vibration and at a dry place.

Alignment of the scale

- 1) Place the chair scale on a plain, dry and level surface before weighing.
- 3) The air bubble in the spirit level should be right in the centre of the circle.
- 4) Please ensure that the scale has no other contact to the floor than by the four wheels after the patient has been seated onto the chair scale.

Power supply


Power is supplied either by the rechargeable battery in the display unit or by the mains power via the supplied power unit. The rechargeable battery pack is consisting of 4xAA NIMH rechargeable batteries.

Use the AC adapter to load the rechargeable batteries. The imprinted voltage value at the mains adapter must match the local mains voltage. When the battery is being charged for the first time a sufficient charging period of approx. 24 hours is necessary to achieve a full battery load.

The wall socket must be located near to the unit and be easily accessible. Please use only the mains adapter supplied by ADE. The mains adapter is charging the battery pack at the same time.

Replacing the rechargeable battery

The battery compartment is located at the back of the display.

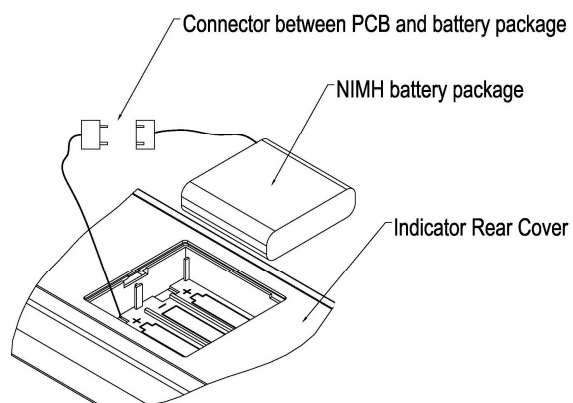


- 1) Open the battery compartment.
- 2) Remove the battery cables carefully from the housing, connect the wires and insert the battery into the housing.
- 3) Close the battery compartment again.


Only use original rechargeable batteries and charger units from ADE. The warranty does not cover any damage caused by using other types of batteries or charger units.


Display

Front view and side view of the display

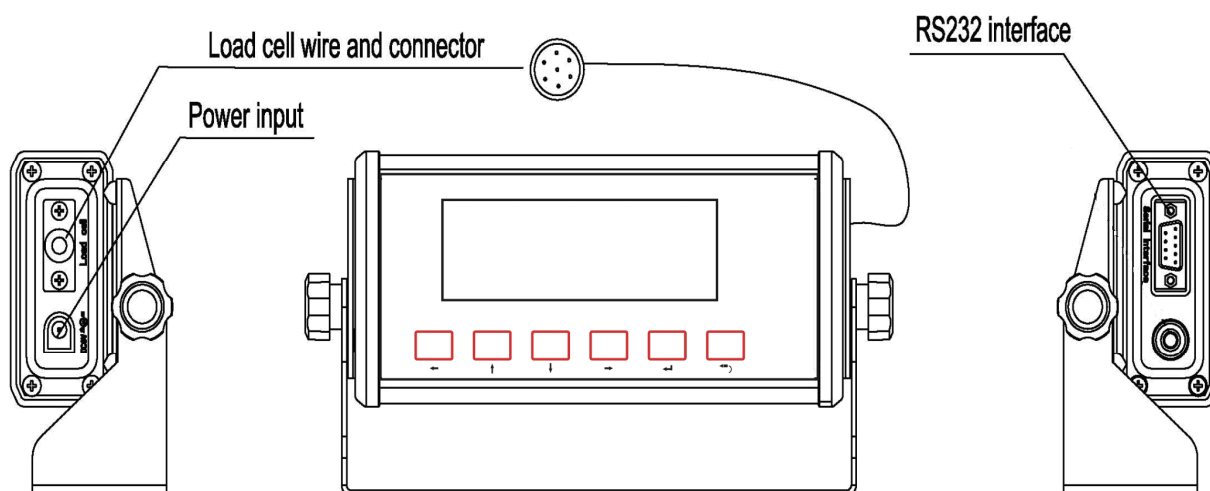

Display description

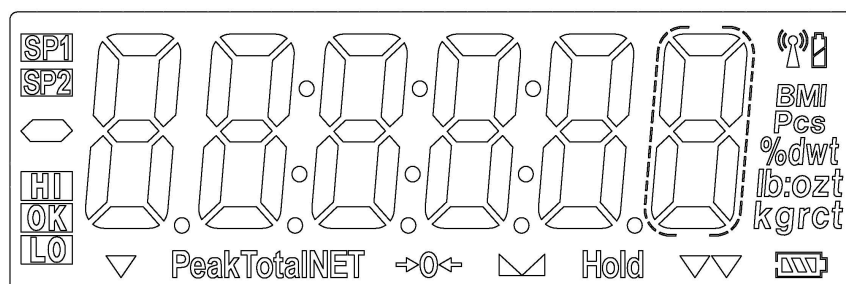

Name	Description
	Status indicator for the current battery charge level. When this symbol appears is the scale in battery operation mode or will be charged.
→0←	The scale is within the zero level.
Standstill status indicator (14) ▲▲:	The scale is at a standstill, meaning the weight is stable and no movement is on the platform. This is a mandatory precondition for functions such as resetting, printing and taring. In case the LCD is not displayed is the scale not in a standstill mode.
"Hold"	Displayed when the hold function is activated.
"lb"	Displayed when the weighing unit is displayed in pounds.
"kg"	Displayed when the weight is displayed in kilograms.

Key pad



Name	Description
HOLD	Activates the Hold-Function.
PRINT	Transfer of data to serial communication port RS 232.
BMI	After the user steps on the scale enter same in order to proceed with the BMI mode
UNIT	Switch button between kgs and lbs.
<u>TARE</u> PRESET	Activates the tare function and the Preset Tare Function.
<u>ZERO</u> ON/OFF	Switches the scale on/off and activates the zero function.
←	During operation this key is being used to switch between the displayed figures.
→	During operation this key is being used to switch between the displayed figures.
↓	In BMI mode use this key to switch between the numbers downwards.
↑	In BMI mode use this key to switch between the numbers upwards.
↵	Enter button to confirm the value.

Operation

Positioning of patient

Please ensure for security reasons that all brakes at the wheels are being locked. Move the armrest and footrest in an upright position before the patient is being moved onto the scale. Fold down the armrest and footrest and place the feet of the patient upon the footrest.

After finishing the weighing procedure please make sure, that arm- and footrest are being moved again into the upright position before patient stand up again.



Armrest and footrest are not to be used as helping device for getting up from the chair!

They are to be understood as supporting device for arms and legs only in order to allow an accurate weighing procedure!

Correct weighing

- Enter **ON/OFF** to get into the normal operating mode of the scale with no load on the chair scale. An automatic function test will be performed afterwards and the zero setting of the scale. When '0.0' appears you are in the kg weighing mode. Additionally the display shows the symbol '→0←' to confirm stability of the zero setting.
- The scale is now ready to be used.
- Help the patient into the chair scale and ensure that he is not moving.
- The weight could be only determined when there is no contact of the feet to the floor. For this reason ensure that the patient's feet rest on the footrest.
- The utmost accuracy has been achieved. after the weight is being displayed and the symbol '▲▲' appears
- To turn off the scale press **ON/OFF** for a period of minimum 3 seconds. Using the scale on mains it may remain permanently switched on or can be shut off manually by pressing key.

How to change the unit

The scale offers the possibility to select between the weighing mode kg and lb. To change the mode press the **UNIT** key. Please check weighing mode after switching on to get proper result.

Tare function

The tare function allows ignoring a fixed weight (e.g. clothes) that will be deducted after each weighing procedure. Proceed as follows:

- Press the start key with no load on the scale.
- Place the additional weight of the object(s), which needs to be ignored, on the scale and store the result by pressing the **TARE** key.
- The display is being reset to zero. The scale is now in NET weighing mode which is also indicated on the display.
- Remove now the objects from the platform. The ignored weight is being displayed with a minus.
- Place the Patient and the additional weight (e.g. clothes) on the scale.
- The scale determines the weight of the patient without the additional weight. You may now use the scale for as many weighing procedures and the stored value will always be deducted as long as the scale is not turned off.
- Enter the tare button again to get of the tare mode.
- The tare value is likewise erased by the scale until pressing the tare button or being switched off.

Weighing with preset tare values

To input a pre set tare value press down the tare button more than 3 seconds. NET will appear at the screen. Follow the same steps as before and place a load on the platform. The last stored tare value will appear at the display and ignored by the scale.







HOLD function

The Hold function is being used if you like to hold the results at the display after the weight/load has been removed from the scale.

- Press **HOLD** key while scale is under load.
- "HOLD" is being displayed at the screen.
- The weight remains saved in the display after unloading the scale.
- For deactivation of the Hold function press again the **HOLD** key.

BMI (Body Mass Index)

The Body Mass Index is the ratio between height and weight squared. The BMI is accepted world wide – also by WHO (World Health Organization) - helping to evaluate the state of nutrition and with that value also the state of health of a person. The result is a tolerance value.

- Start the scale by entering the ON/OFF button. The scale is automatically being set to zero.
- Help the patient into the chair.
- Take care that the feet are being rested on the footrest.
- Wait until the weight is being displayed in a stable condition and  appears on the screen.
- Press the **BMI** key shortly.
- The scale starts automatically with the last input. Use the arrow buttons to enter the height of the patient.     Confirm the height with the enter button .
- The BMI is now being displayed .
- To correct the given height figures press the BMI button once again and the display returns to the height mode.
- To get back into normal weighing mode and leave the BMI modus simply step off the platform.

Evaluation of the Body Mass Index

Compare the determined value which corresponds to those being used by the WHO.

BMI below 18,5

- The patient is under the regular standard and does not got enough weight. An increase of weight is recommended. Please consult a professional.

BMI between 18,5 and 24,9

- The patient got a normal weight. If he feels well there is no need for a change.

BMI between 25 and 30

- The patient is slightly overweighed to pre-obese. A reduction of weight is indicated or, is necessary if the state of health is already affected (e.g. diabetes, high end blood pressure, heart diseases).


BMI over 30

- Reduction of weight is imperative. To visit a doctor is highly recommended.

Connecting additional devices








Connection of printer, PC or remote-display will be done with the RS-232 interface. For connection of additional devices kindly ask your local representative or authorized ADE dealer for further instructions.

Print out a record

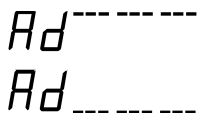The scales must be at standstill. The standstill status symbol  must appear at the screen. Press the ENTER key to send the data to the serial interface.

Note: Printing is not possible if the net weight is 0. The print function only produces one print-out. A reset is required to print out another copy.

Error Messages

Error Codes	Description	Solution
	Load cell wires to indicator are incorrectly connected; or shorted, or opened; or ADC/ load cell are being damaged	Make sure wires are in good order and condition and correctly connected. Replace load cell or ADC chip. Service is required.
	Weight reading exceeds the zero limit after switching the scale on.	Make sure scale platform is empty.
	Weight reading is below the zero limit after switching the scale on.	Install platform on scale. Otherwise the zero calibration/ adjustment have to be done by authorized personnel.
	Weight reading exceeds load limit.	Reduce load on scale until weight value can be displayed.
	Weight reading below load limit.	Service by authorized personnel required.
	Configuration or Calibration parameters are not correctly set.	Contact your local dealer / supplier for calibration purpose.
	Capacity parameters are not correct.	Contact your local dealer / supplier for a new set-up.
	Calibration error. The incoming signal of loaded weight is too small, too big, unstable or un-linear.	Contact your local dealer / supplier for a new set-up.
Not turn on.	Power cord is not properly connected. Power outlet not supplying electricity. Batterie is discharged. Other failure.	Check power cord connections. Make sure power cord is plugged into the power outlet. Check power source. Replace batteries.
Cannot zero the display or will not zero when turned on.	Load on scale exceeds allowable limits, Load on scale is not stable or a load cell damage.	Remove load from the scale; wait for load to become stable. Service required.
No Battery symbol or display of Lo.bAt	Batteries are discharged.	Charge batteries.

Cleaning and Maintenance

Cleaning

Before cleaning disconnect the scale from the socket. For cleaning just use a damp cloth or common disinfection fluids. Do not use any aggressive cleaning fluids, abrasive or acid cleaners or white spirits. During the process of cleaning take care that no water or cleaning fluids are penetrating the scale.

Storage and Transport

Please keep all original parts and pieces for an eventual sending back of the scale in order to avoid any possible damage during transport, which automatically leads to non warranty. Disconnect all cables before transport and avoid unnecessary damages.

Warranty – Liability

ADE will repair or replace this product within a period of 2 years from date of delivery applying to defects occurred due to poor material or workmanship (presentation of invoice is necessary). All moveable parts – batteries, cables, mains units, rechargeable batteries etc. – are excluded. Warranty does not include natural wear, damages caused by incorrect or negligent handling, overuse or unsuitable or improper storage. The cost of transport will be borne by the customer should the equipment be located anywhere other than the customer's premises. In the event of transport damage, claims under warranty can be accepted subject to using the complete original packaging and the equipment secured the way it was packed and secured originally. All the packaging should therefore be retained.

Any warranty claim will be rejected if the equipment is opened by persons not authorized expressly by ADE to do so.

Customers abroad are kindly requested to contact their local dealer for any warranty claim, customer service and spare parts.

Technical data

Max. Capacity:	250 kg / 660 lbs
Graduation:	100 g / 0,2 lb
Power supply:	Mains and rechargeable batteries
Work current:	≤15mA (with backlight off and no load cells)
Mains adapter:	AC Adapter: 6-9V _{DC} , ≥500mA,
Central negative:	4xAA NIMH rechargeable batteries pack
Display:	6-digit,7-segment , 1"(25mm) LCD with 16 annunciators and blue backlight
Working temperature:	-10°C to 40°C
Storage temperature:	-20°C to 70°C
Humidity:	10 to 90% RH without condensation
Voltage:	5Vdc
Max. Current:	60mA (can power 4-350 ohm bridge, take care the limitation when USB is power supply)
Serial port:	Full-duplex RS232

CE-marking and Declaration of Conformity

ADE products are manufactured as per the standards applicable of the actual European norms and directives to produce and offer world-wide products at the latest technical standard and with a long lifetime.

Declaration of CE Conformity



Declaration of conformity by the manufacturer

These scales have been manufactured in accordance with the harmonised European standards.
They conform to the regulations of the EC-directives listed below:

- EMC Directive 2014/30/EC
 - Low Voltage Directive 2014/35/EC
 - RoHS Directive 2011/65/EC
- in the currently valid versions.

This declaration loses its validity if modifications are made to the scale without our approval.

Hamburg, March 2021

ADE Germany GmbH
Neuer Hoeltigbaum 15
22143 Hamburg / Germany

Manufacturer:

ADE Germany GmbH
Neuer Hoeltigbaum 15
22143 Hamburg / Germany
 +49 40 432 776-0
 +49 40 432 776-10
 info@ade-germany.de
 www.ade-germany.de

Dealer: