


# PRODUCT INFORMATION

# ADE

## Fish slicing machines

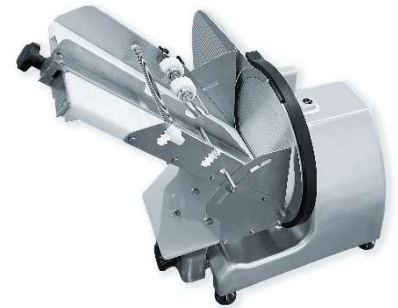

Steeply inclined carriage with guide rail and guide ribs for non-stick effect



Carriage inclination adjustable for different slice sizes

## Fish slicing machine – Model MARE 350

- Easy-to-move cuttings feed thanks to the steep incline of the carriage, ideal for cutting salmon sides and fish fillets
- Carriage with support surface adjustable in inclination from 15° to 45° for different slice sizes
- Special ribs for non-stick effect and guide rail for safely sliding cuttings
- Solid housing in anodized aluminum
- Carriage surface made of food grade plastic
- Powerful motor
- Switch unit IP69
- High cutting precision, also for carpaccio
- Continuously adjustable slice thickness: 0-20 mm
- Multifunctional blade of the latest generation: 2-level profile and hard-chrome plated surface finish for improved non-stick effect (Teflon blade no longer required for cutting cheese)
- Carriage easy to remove for effortless cleaning
- Delivery includes a sharpening tool

### Technical Specifications

Model	MARE350-230
Art. No.	4015
Blade Ø	350 mm
Cutting area	244 x 35 mm
Power rating	0.37 kW
Dimensions (max. WxDxH)	844 x 760 x 822 mm
Dead weight	48 kg
Type of current	230 V

Technical modifications might be due to technical improvements.